

Harlequin's Professional Freestanding Ballet Barre **Assembly Instructions**



Your Harlequin Professional Freestanding Ballet Barre will arrive in five sections:

- ① 1 x top section with two beach bars
- ② 2 x upright sections
- ③ 2 x foot sections
- ④ 1 x Allen/hex key



1. Insert an upright section into a foot section and repeat for the opposite upright and foot section.



2. Tighten the screws with the Allen key provided.



3. Insert the connected upright and foot sections into each end of the top section.



4. Tighten the screws with the Allen key provided.

N.B The feet on the foot sections are adjustable for stability on an uneven floor. Adjust with a spanner as required (spanner not included).



Australian Harlequin Pty Ltd
 Unit 1, 47 Prime Drive
 Seven Hills, NSW 2147
 Australia
 Tel: +61 (2) 9620 7770
 Fax: +61 (2) 9620 7771
 www.harlequinfloors.com
 auscontact@harlequinfloors.com

SYDNEY
 LONDON
 LUXEMBOURG
 BERLIN
 PARIS
 MADRID
 LOS ANGELES
 PHILADELPHIA
 FORT WORTH
 HONG KONG
 TOKYO

HARLEQUIN 
 The world dances on Harlequin floors®