

Australian Harlequin Pty Ltd 2/11 Penny Place Arndell Park NSW 2148 Australia

T+61 (2) 9620 7770 F+61 (2) 9620 7771 auscontact@harlequinfloors.com www.harlequinfloors.com

CARE AND MAINTENANCE INSTRUCTIONS FOR HARLEQUIN BALLET BARRES

The recommended maintenance instructions must be followed to ensure that Harlequin Ballet Barres retain their appearance and performance characteristics.

Harlequin solid beech ballet barres are supplied 'unfinished' and will acquire a patina with use. This is to be expected and will not affect the performance or longevity of the barres.

Harlequin do not recommend sealing or waxing of solid beech ballet barres. This may affect the finish and make the barres difficult to clean in the long term.

Regular maintenance

Dust the ballet barres and brackets regularly with a clean dry cloth.

Periodically wipe the barres and brackets with a damp cloth, and polish with a clean dry cloth.

Persistent marks may be removed from solid beech barres by lightly sanding with '00' grade wire wool or very fine sandpaper.

Marks on the brackets and aluminium barres may be removed using a mild detergent solution with a damp cloth. Powerful or abrasive cleaners should be avoided as they may damage the surface.



Issue 3: Issue by British Harlequin plc





