Harlequin Professional Home Studio Kit Assembly Instructions

The following instructions apply to the 2m x 3m Harlequin Professional Home Studio Kit with a Harlequin Cascade top surface.

We recommend that two people assemble this floor. Before you start, please ensure that you have enough room to lay it and that your sub-floor (concrete, carpet, etc.) is clean. You will also need a pair of scissors to cut your Harlequin dance floor tape.



- Two 2m x 1m Harlequin Liberty[®] sprung floor panels
- Two 1m x 1m Harlequin Liberty[®] sprung floor panels
- One locking tool
- A 2m x 3m roll of Harlequin Cascade vinyl top surface
- One roll of Harlequin double-sided dance floor tape.





How to assemble

Place your 1m x 1m and 2m x 1m Harlequin Liberty[®] sprung floor panels

onto your sub-floor. Push the smaller panel against the larger panel and join them together using the locking tool. You will need to turn the locking tool a full 360 degree revolution and will hear a noticeable 'click' once the latch and lock mechanism has joined together.



Place your other 1m x 1m and 2m x 1m Harlequin Liberty® sprung floor panels onto your sub-floor, so that they are in a brickwork layout. Push the panels against the other panels and join them together using the locking tool.



Roll out your 2m x 3m roll of Harlequin Cascade vinyl top surface onto the Harlequin Liberty® sprung floor.



Around all the edges of the Harlequin Liberty[®] sprung floor, apply the Harlequin double-sided dance floor tape.



Gradually unpeel the Harlequin double-sided dance floor tape before sticking the Harlequin Cascade vinyl top surface down as you go around the edges.





Your Harlequin Professional Home Studio Kit is now ready for use, although we recommend that you clean it first using Harlequin vinyl dance floor cleaner.

If you would like further information, advice and samples please contact us on +61 (2) 9620 7770 or auscontact@harlequinfloors.com

