

The following instructions apply to the 2m x 2m Harlequin Professional Home Studio Kit with a Harlequin Reversible top surface.

We recommend that two people assemble this floor. Before you start, please ensure that you have enough room to lay it and that your sub-floor (concrete, carpet, etc.) is clean. You will also need a pair of scissors to cut your Harlequin dance floor tape.

Your kit contains:

- One 2m x 1m Harlequin Liberty® sprung floor panel
- Two 1m x 1m Harlequin Liberty® sprung floor panels
- One locking tool
- A 2m x 2m roll of Harlequin Reversible vinyl top surface
- One roll of Harlequin double-sided dance floor tape.





How to assemble





Place your other 1m x 1m Harlequin Liberty® sprung floor panel onto your sub-floor and push it into place. Join this panel to the others using the locking tool.



Roll out your 2m x 2m Harlequin Reversible vinyl top surface onto the Harlequin Liberty® sprung floor.







Your Harlequin Professional Home Studio Kit is now ready for use, although we recommend that you clean it first using Harlequin vinyl dance floor cleaner.

If you would like further information, advice and samples please contact us on +61 (2) 9620 7770 or auscontact@harlequinfloors.com

