

The following instructions apply to the 2m x 3m Harlequin Professional Home Studio Kit with a Harlequin Studio top surface.

We recommend that two people assemble this floor. Before you start, please ensure that you have enough room to lay it and that your sub-floor (concrete, carpet, etc.) is clean. You will also need a pair of scissors to cut your Harlequin dance floor tape.

Your kit contains:

- Two 2m x 1m Harlequin Liberty® sprung floor panels
- Two 1m x 1m Harlequin Liberty® sprung floor panels
- One locking tool
- 2 rolls of 2m x 1.5m Harlequin Studio vinyl top surface
- One roll of Harlequin double-sided dance floor tape.









How to assemble





Place your other 1m x 1m and 2m x 1m
Harlequin Liberty® sprung floor panels
onto your sub-floor, so
that they are in a
brickwork layout.
Push the panels
against the other
panels and join
them together
using the locking
tool.



Roll out your 2 rolls of 2m x 1.5m Harlequin Studio vinyl top surface onto the Harlequin Liberty® sprung floor.







Your Harlequin Professional Home Studio Kit is now ready for use, although we recommend that you clean it first using Harlequin vinyl dance floor cleaner.

If you would like further information, advice and samples please contact us on +61 (2) 9620 7770 or auscontact@harlequinfloors.com

